

# Selfadhesive and Anti-slip Circle (285mm) Labels



## Media overview

OKI Media Reference	OKIMED111
Supplier	Floralabels
Supplier Reference	#3067R285
Media Description	Self-Adhesive and Anti-slip Floor Circle
Key Characteristics	
Size	Custom   297mm x 298 mm Circle  285mm
Weight	
Thickness	0.31 mm
Warranty	See Media Statement
IVP Media Proposition	Waterproof and weatherproof self-adhesive circle labels
IVP Print Applications	Floor, wall and display circle signage

## Media Samples



OKIMED111 Floralabels Covid19\_Round Floor Sticker 285mm.pdf

## Selfadhesive and Anti-slip Circle (285mm) Labels



### Device Setup

Device	C824n, C824dn, C834nw, C834dnw, C844dnw
Firmware Level	A01.11_0_4 or later
CMF version	01.02.05 (see CMF section for details on CMF)
Media Type	USERTYPE 2
Media Weight	Not required
Feeding Tray & Orientation	MPT (Multi Purpose Tray) SEF (Short Edge Feeding) Feed 1 by 1
Output Bin	Face-down (Front Output) Stack 1 by 1
Limitations	<ul style="list-style-type: none"><li>• The coating on the surface of the Media can occasionally cause sheets of Media to stick together and be fed through the paper path simultaneously. If this happens please feed the Media one sheet at a time.</li><li>• Media must be printed from the MP Tray only.</li><li>• Large curling may occur due to the paper construction of the labels.</li><li>• Only place one sheet at a time in the tray. If you do not do this you may get multiple feeds or mis-feeding of the media</li><li>• When you print some solid patterns, blistering may occur where the surface looks like a wave</li><li>• The glue of the label may remain in the device. Please ensure that the device is cleaned regularly</li><li>• Mis-registration of approximately 200micro meters may occur suddenly. This is generally caused due to media thickness or surface properties.</li></ul>



MPT Feeding



Front Output Bin

# Selfadhesive and Anti-slip Circle (285mm) Labels



## Sample Printing Instructions

*These instructions are based on C844 model*

### 1 Driver

### 2 Device setup and preparation

Open MPT tray and put the banner media into the tray according to orientation described into «device setup» section

### 3 Printing the file

Open the PDF file with Acrobat Reader DC and click CTRL+P to open the PRINT interface




### 4 Select the C844 PS printer

### 5 Configure the paper sizing & handling settings as show in the picture

### 6 Click on Properties button to access to the PS driver settings

### 7 Access to the Paper/Quality tab to configure Paper Source and Media Type according to the setting specified into «device setup» section

Postscript Version 1.0.1

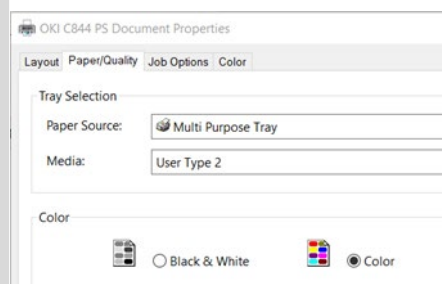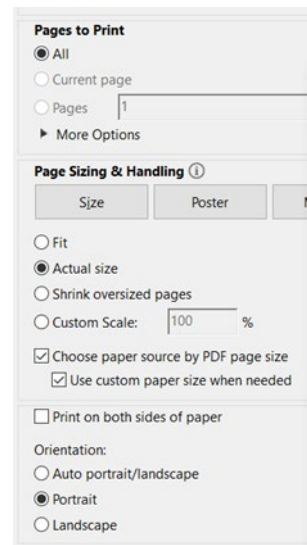

# Selfadhesive and Anti-slip Circle (285mm) Labels



## Sample Printing Instructions

*These instructions are based on C844 model*

- 8 Please click on Advanced button to access to the interface to setup the Custom Size (297mm x 298mm) and click OK to confirm the setting

*Please note that using CMF file and «USERTYPE 2» media type the «media weight» setting isn't required*

- 9 Click Job Option tab to set «Quality» Normal(600x600)

- 10 Click Colour Tab to set Colour Mode on «Automatic» and «Toner Saving» on OFF

- 11 Click OK to register the setting and return to the Adobe Reader DC print Interface

- 12 Click «Print» button to send the data to the printer

