

# Avery White Ultragrip Labels



## Media overview

OKI Media Reference	OKIMED15
Supplier	Avery
Supplier Reference	L7165
Media Description	White Ultragrip labels for boxes (8 per sheet)
Key Characteristics	High grip, no residue
Size	A4
Weight	-
Thickness	0,2 mm
Warranty	See Media Statement for the details
IVP Media Proposition	Labels for letters and parcels. No adhesive residue
IVP Print Applications	High grip labels/stickers printed on A4 media - Parcel labels

## Media Samples

**DELIVER TO:**  
JOHN SMITH  
BUILDING 7W A,  
OFFICE 2008,  
DUBAI AIRPORT FREE ZONE



**DELIVER TO:**  
JOHN SMITH  
BUILDING 7W A,  
OFFICE 2008,  
DUBAI AIRPORT FREE ZONE

**DELIVER TO:**  
JOHN SMITH  
BUILDING 7W A,  
OFFICE 2008,  
DUBAI AIRPORT FREE ZONE



**DELIVER TO:**  
JOHN SMITH  
BUILDING 7W A,  
OFFICE 2008,  
DUBAI AIRPORT FREE ZONE

OKI C844 (OKIMED15) Avery White Ultragrip labels for boxes

# Avery White Ultragrip Labels



## Device Setup

Device	C824n, C824dn, C834nw, C834dnw, C844dnw
Firmware Level	A01.11_0_4 or later
CMF version	Not required
Media Type	LABEL
Media Weight	UH3 (Ultra Heavy 3)
Feeding Tray & Orientation	MPT (Multi Purpose Tray) LEF (Long Edge Feeding)
Output Bin	Face-up (Rear Output)
Main Limitations <i>Please refer to the MEDIA Statement for all the details</i>	Media must be printed from the MP Tray only and exit to the Rear output tray. Large curling may occur due to the paper construction of the labels. Mis-registration of approximately 200micro meters may occur suddenly. This is generally caused due to media thickness or surface properties. We recommend print sheet one by one. Otherwise fusibility may not good and it causes toner may peel off easily. Glossiness of print out may be slightly uneven when you print solid pattern..



MPT LEF Feeding



Face-up Raer Output




## Sample Printing Instructions *These instructions are based on C844 model*

- 1 Driver**
- 2 Device setup and preparation**  
Open MPT tray and put the media into the tray according to orientation described into «device setup» section
- 3 Printing the file**  
Open the PDF file with Acrobat Reader DC and click CTRL+P to open the PRINT interface
- 4 Select the C844 PS printer**
- 5 Configure the paper sizing & handling settings as show in the picture.**
- 6 Click on Properties button to access to the PS driver settings**
- 7 Access to the Paper/Quality tab to configure Paper Source and Media Type according to the setting specified into «device setup» section**

Postscript Version 1.0.1



MPT LEF Feeding

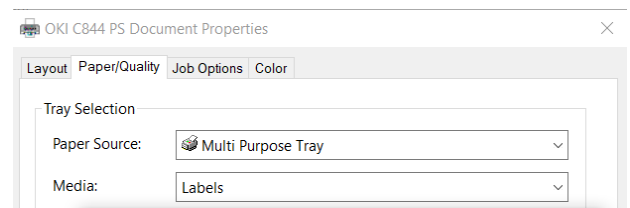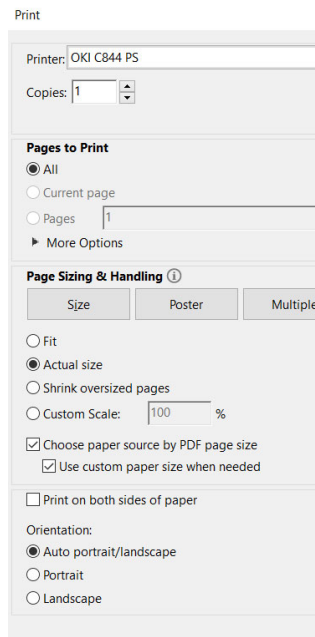


# Avery White Ultragrip Labels




## Sample Printing Instructions *These instructions are based on C844 model*


- 8** Please click on Advanced button to access to the interface to setup the Media Weight Ultra Heavy 3 (UH3) and click OK to confirm the setting

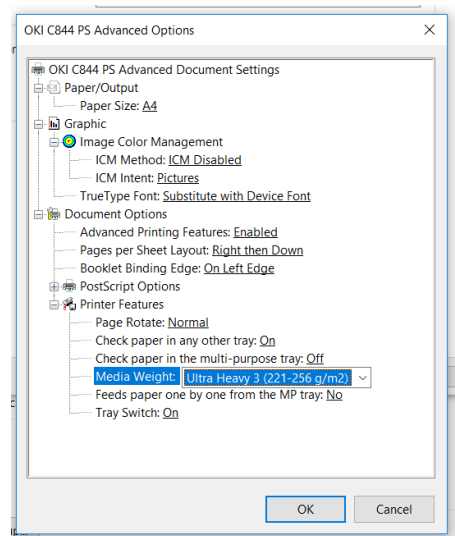

- 9** Click Job Option tab to set «Quality» Normal(600x600)

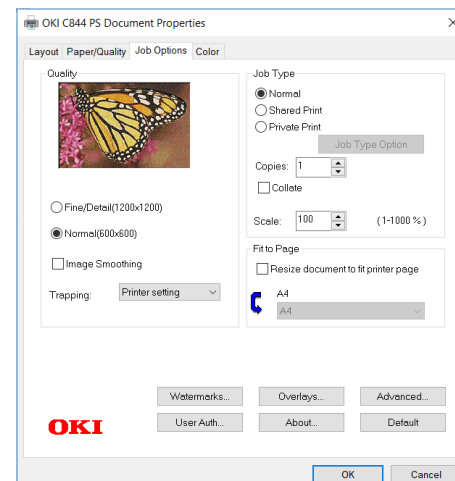

- 10** Click Colour Tab to set Colour Mode on «Automatic» and «Toner Saving» on OFF

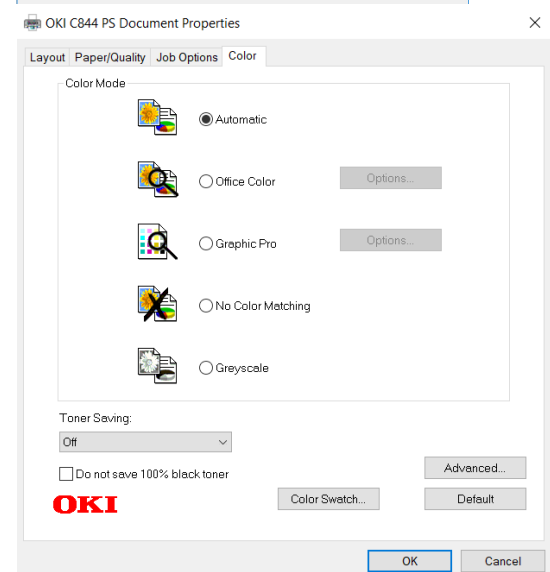

- 11** Click OK to register the setting and return to the Adobe Reader DC print Interface

- 12** Click «Print» button to send the data to the printer

